

Panasonic

Vanguard EX Numeric POCSAG Pager

EP-2B Series (EP-2B2/EP-2B4/EP-2B5) Quick Reference Guide

Click - Press once in 1 second intervals. Double Click - Press twice in 1 second intervals.

To Power On - Slide the POWER switch to the on “M” (vibrate) or “N” (beep) position.

To Power Off - Slide the POWER switch to off (“●”) position.

Receiving Messages at “N” (Audible Alert) Position - Press the POWER switch to stop the alert. Press the POWER switch to view messages longer than 12 digits. Press the POWER switch to review remainder of message.

Receiving Messages at “M” (Silent/Vibrate/Muted) Position -

PAGER FUNCTION	STANDARD MODEL	VIBRATOR MODEL	MUTING MODEL
LCD DISPLAYS	✓	✓	✓
LED FLASHES	✓	✓	✓
PAGER VIBRATES	✗	✓	✗
EMITS LOW LEVEL ALERT	✗	✗	✓

To Save a Message – While the message is displayed, double click the POWER switch and the save message indicator (⇐) flashes. Click the POWER switch to save. Up to 6 messages can be saved.

To Delete a Message - While message is displayed, double click the POWER switch the save message indicator (⇐) appears. Double click again and the delete message indicator (✱) flashes. Click to delete or double click to cancel. Saved messages can also be deleted.

Deleting All Messages - From standby click the POWER switch until memory used screen appears. Double click the POWER switch, ALL DELETE will flash in display. Click the POWER switch to delete or double click to cancel.

Reviewing Messages - From standby, click the POWER switch to view latest message. Click the POWER switch repeatedly to view earlier messages. The last screen will show memory used. The time in the upper left hand corner shows the elapsed time between the message being received and the message being viewed. Continue to press the POWER switch to view messages, if a message came in on a different channel, then the channel number will display in the upper left hand corner instead of the elapsed time.

Setting the Clock:

- 1) Set the POWER switch to the OFF position.
- 2) While holding in the POWER switch, slide the POWER switch from OFF to the "N" position. When the alert tones stop, release the POWER switch.
- 3) Press the POWER switch button one click inwards to change the month setting. Double click the POWER switch to save your selection.
- 4) Press the POWER switch button one click inwards to change the day setting. Double click the POWER switch to save your selection.
- 5) Press the POWER switch button one click inwards to change the hour setting. Double click the POWER switch to save your selection.
- 6) Press the POWER switch button one click inwards to change the minute setting. Double click the POWER switch to save your selection.
- 7) Press the POWER switch button one click inwards to save all settings and automatically return to Standby.

Setting the Alarm - To activate, from standby double click the POWER switch and AL On appears in display. Follow clock setting from step 5 to set time. To deactivate, from standby double click the POWER switch, AL On appears in display. Double click again and AL OFF appears in display. Click the POWER switch to select OFF, click again to deactivate and return to standby.

Setting Auto On/Off - Double click the POWER switch until AUTO On appears. Click the POWER switch to pull up OFF time, set time, continue and set ON time. To deactivate, double click until AUTO OFF appears, click the POWER switch to select off.

Setting LPA (Long Period Alert) - From standby, double click the POWER switch continuously until "LPA" appears in display. Click the POWER switch, "On" appears, click again to activate or double click to deactivate (OFF will appear).

Setting Alert Type - From standby, double click the POWER switch until "bEEP" appears. Click to display and hear beep options. Double click to scroll choices, single-click to select choice.

Setting Channel - Press and hold the POWER switch until the LCD displays the message "On ch1", the display will begin to scroll through the 3 channels available (if so programmed). When the display begins to scroll, release the POWER switch. Press the POWER switch once to select the desired channel when it appears on the LCD display.